


1759

# Simplicity

REG. U. S. PAT. OFF.

## COMBINATION HEAVY DUTY RIDING SULKY ARTICLE 990006 TRAILER BODY ARTICLE 990029 LAWN ROLLER ARTICLE 990083

**INSTRUCTIONS  
AND PARTS LIST**

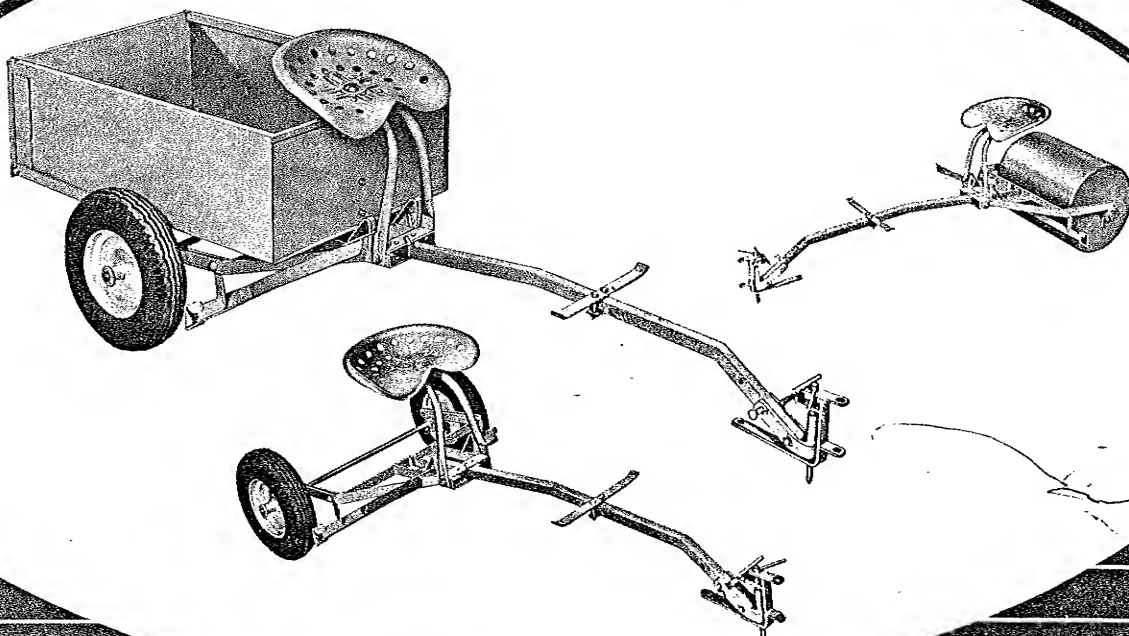

Simplicity Manufacturing Company •

PORT WASHINGTON, WISCONSIN

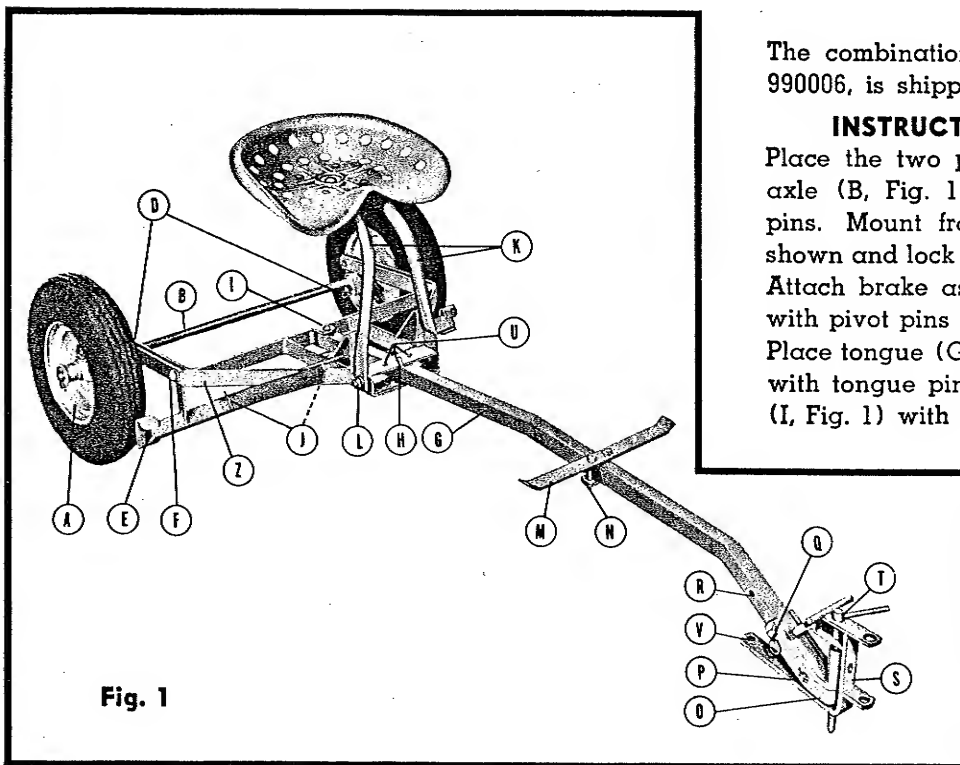


Fig. 1

### PACKING LIST

The combination heavy duty riding sulky, Article No. 990006, is shipped complete in two cartons.

### INSTRUCTIONS FOR ASSEMBLING SULKY

Place the two pneumatic tired wheels (A, Fig. 1) on axle (B, Fig. 1) and secure with washers and cotter pins. Mount frame assembly (Z, Fig. 1) on axle as shown and lock with pins and spring clips at (D, Fig. 1). Attach brake assembly (E, Fig. 1) to frame assembly with pivot pins and cotter pins as shown at (F, Fig. 1). Place tongue (G, Fig. 1) into position as shown securing with tongue pin and spring clip at (H, Fig. 1) and at (I, Fig. 1) with pin and cotter pin. Attach brake spring

## HEAVY DUTY RIDING SULKY

to brake lever and frame with cotter pins as shown at (J, Fig. 1). Bolt seat support (K, Fig. 1) to frame assembly as shown at (L, Fig. 1) using the two bolts and bushings. Seat will then be free to pivot so that it can be used as a latch. Attach foot rest (M, Fig. 1) to tongue with two bolts and clamp (N, Fig. 1). Clevis (O, Fig. 1) should now be mounted to tongue with pin

(P, Fig. 1) and locked with cotter pin as shown. Tongue pin and spring clip at (Q, Fig. 1) can be placed in the location as illustrated or into position at (R, Fig. 1). Instructions for proper setting of the tongue pin are located under paragraph — "Operation Instructions". Mount frame extension (S, Fig. 1) to clevis with hitch pin (T, Fig. 1) as shown.

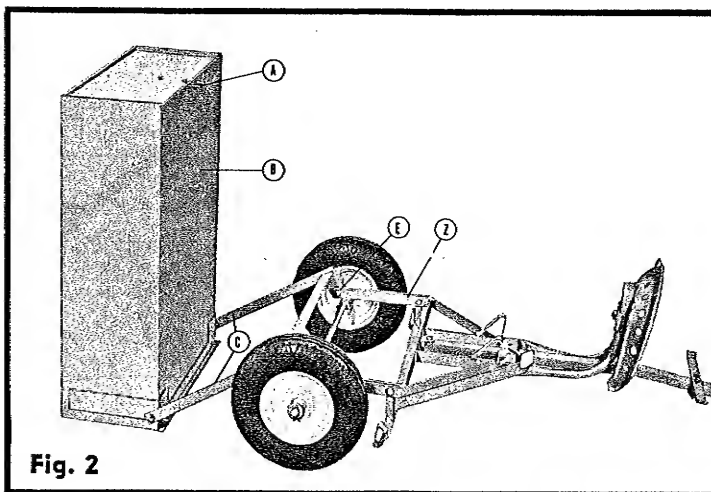


Fig. 2

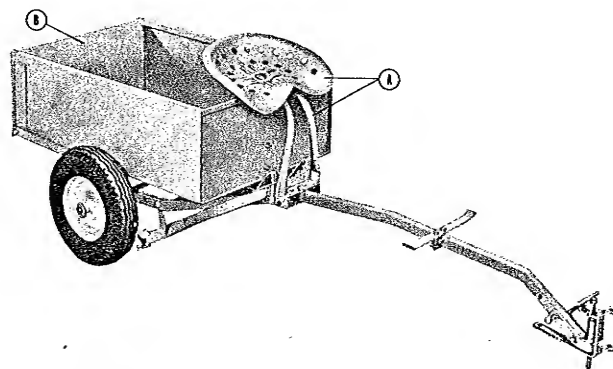


Fig. 3

## TRAILER BODY

### PACKING LIST

The trailer body only, Article No. 990029, for use with combination riding sulky is shipped complete in one carton.

### INSTRUCTIONS FOR ASSEMBLING TRAILER BODY

Bolt box guide plate (A, Fig. 2) to trailer body (B, Fig. 2) as shown. Attach box pivot assembly (C, Fig. 2) to trailer body as shown using the two bushings and bolts

provided. Position trailer body as shown in Fig. 2 and assemble box pivot assembly (C, Fig. 2) to sulky frame (Z, Fig. 2) with two pivot pins and spring clips as shown at (E, Fig. 2).

Place trailer body and seat in position as shown in Fig. 3. Be sure seat and seat support (A, Fig. 3) is securely locked over trailer body to prevent tipping during loading or transporting. Install end gate (B, Fig. 3).

COMB. SULKY & ROLLER

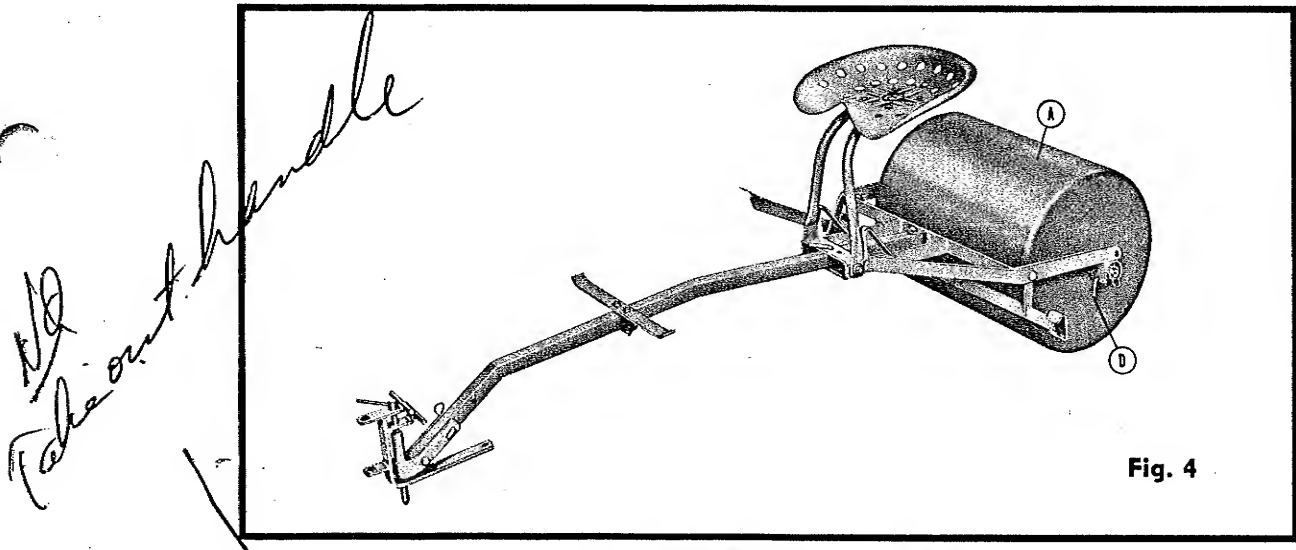


Fig. 4

## LAWN ROLLER

### PACKING LIST

Lawn roller with removable handle Article No. 990083, for use with combination riding sulky is shipped loose with handle packed separately in a carton.

### INSTRUCTIONS FOR ASSEMBLING LAWN ROLLER AND HANDLE TO LAWN ROLLER

If trailer body is used with the combination riding sulky, remove the two spring clips and pivot pins (E, Fig. 2).

Replace pivot pins and spring clips in box pivot assembly for safe keeping. Remove spring clips and pins (D, Fig. 1) from frame assembly (Z, Fig. 1). Wheels and axle can now be removed from frame and lawn roller (A, Fig. 4) installed to frame assembly as shown in Fig. 4. Lock to frame with pins and spring clips as shown at (D, Fig. 4).

To attach handles to lawn roller use the two tongue pins and spring clips furnished with the handles.

## OPERATION INSTRUCTIONS

1. To permit sulky frame to track directly behind tractor or to either side, position tongue pin (H, Fig. 1) into either one of three holes provided in sulky frame at (U, Fig. 1). This adjustment allows grass or weeds to be cut before being rolled or stamped upon.
2. When using front attachments with sulky, trailer body or lawn roller, remove tongue pin (Q, Fig. 1) and place in hole on tongue at (R, Fig. 1) for safe keeping. This permits front mounted attachment to follow contour of the ground.
3. Seat is adjustable for length on seat support (K, Fig. 1) by loosening bolt and plate under seat and adjusting to desired length.
4. To dump trailer body, remove end gate and swing seat forward. Trailer body will then be unlatched for

- easy dumping. The trailer body chassis is constructed to permit it to be completely tipped over, facilitating cleaning the body — See Fig. 2.
5. When roller is filled with water to maximum capacity, its weight is 250 lbs. CAUTION: Do not leave your roller filled with water where it may freeze.
6. Two-gang companion mower attachment can be used with combination sulky. Tongue of sulky is arched as shown in Fig. 1 allowing mowers and hitch to be attached to frame extension at (V, Fig. 1) with pin and spring clip furnished.
7. Lubricate the wheel bearings frequently. Lawn roller is equipped with nylon bearings that do not need lubrication.

## How to Order Repair Parts for Simplicity Garden Tractors and Attachments

The Authorized Simplicity dealer from whom you purchased your tractor and attachments can supply you with any replacement parts you may need. For prompt service, be sure to see your dealer first. He will furnish the correct parts from his stock or order them for you if necessary. However, you may mail-order directly from the factory.

To have your order filled correctly and for prompt ser-

vice, please furnish the following information:

1. Model, number and year of purchase of tractor or attachment.
2. Part number, description, and quantity of part. (See parts list)

Be sure to include postage with your order. We do not pay transportation charges. Shipping weights are shown. Any excess will be promptly refunded.

We reserve the right to change construction, specifications, prices and terms, without notice and without obligation as to tractors and attachments heretofore shipped.

PRICES SHOWN ARE U.S.A. PRICES. PRICES OUTSIDE OF U.S.A. SUBJECT TO LOCAL IMPORT DUTIES, TAXES, ETC.

Fig. 6

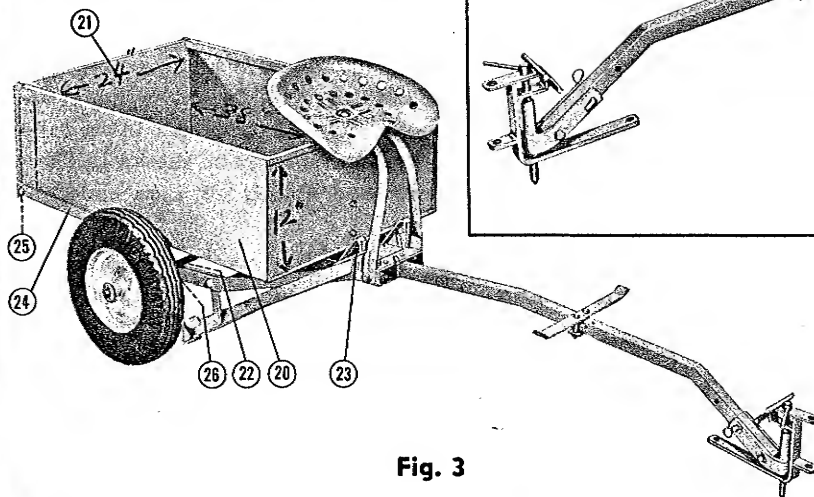
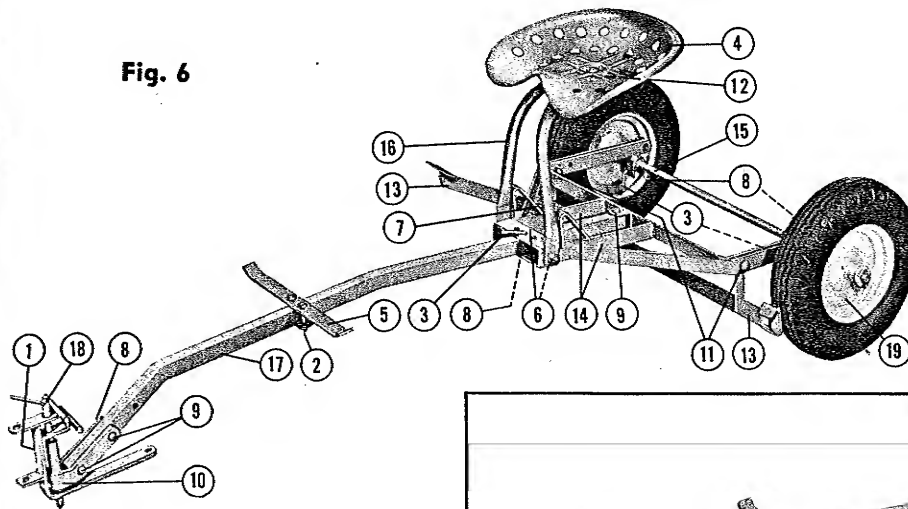


Fig. 3

HITCH  
CARTON 3 of 3  
\$25.00

Fig. 4

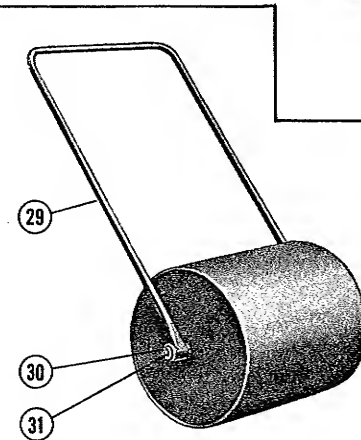
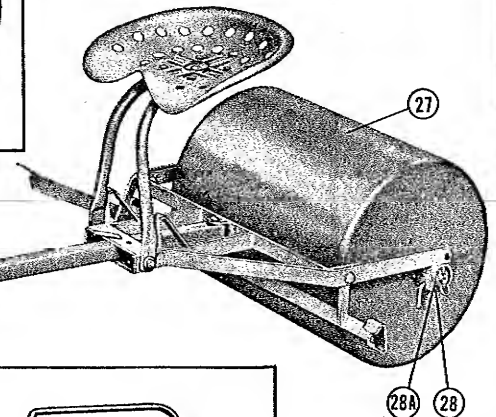


Fig. 5

## REPAIR PARTS LIST FOR COMBINATION SULKY, TRAILER BODY, LAWN ROLLER AND HANDLE FOR LAWN ROLLER

Order by Part Number

Item No.	Part No.	Description	Ship. Wt. Lbs. Oz.	
SULKY				
1	100033	Frame Extension	5	10
2	C-A118	Foot Rest Clamp 801118		8
3	C-A204	Tongue Pin - 8011204		4
4	121029	Seat	5	
5	C-B103	Foot Rest - 802103	2	6
6	P-A32	Bushing - 8111032		3
7	P-A47	Spring — Brake - 8111047		3
8	S1A45A	Spring Clip - 8161045		2
9	100028	Tongue Pin		4
10	100037	Clevis Assembly	3	
11	102004	Pivot Pin		4
12	102006	Seat Plate	1	2
13	102013	Brake Assembly	11	4
14	102021	Frame Assembly	21	
15	102027	Axle Assembly	7	
16	102028	Seat Support	4	
17	102029	Tongue	11	8
18	100035	Hitch Pin Assy.	1	10
19	102032	Wheel only, 4" hub, 3/4" axle, less tire	5	

Item No.	Part No.	Description	Ship. Wt. Lbs. Oz.	
19A	102052	Tire 4.00 x 8 Rib Tread	15	
19B	153038	Tube 4.00 x 8	5	
<b>TRAILER BODY</b>				
20	102002	Trailer Body	58	8
21	102003	End Gate	8	8
22	102004	Pivot Pin		4
23	102005	Box Guide Plate	1	6
24	102024	Box Pivot Assembly	12	
25	R-A76A	Bushing <i>8151076</i>		2
26	S1A45A	Spring Clip <i>8161045</i>		2
<b>LAWN ROLLER</b>				
27	102001	Roller — Lawn	80	
28	102034	Bushing (Nylon)		6
28A	102007	Bearing Retainer	12	
<b>HANDLE FOR LAWN ROLLER</b>				
29	102031	Handle Assembly	10	8
30	S1A45A	Spring Clip <i>8161045</i>		2
31	C-A204	Pin - <i>8011204</i>		4

Fig. 6

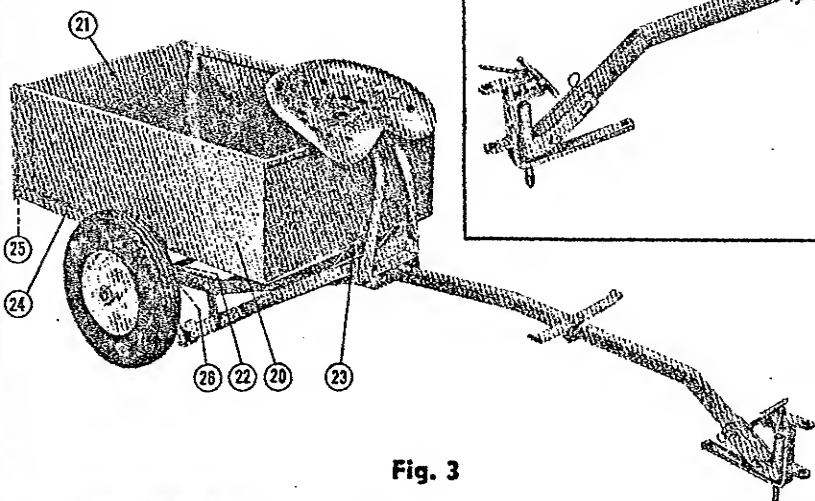
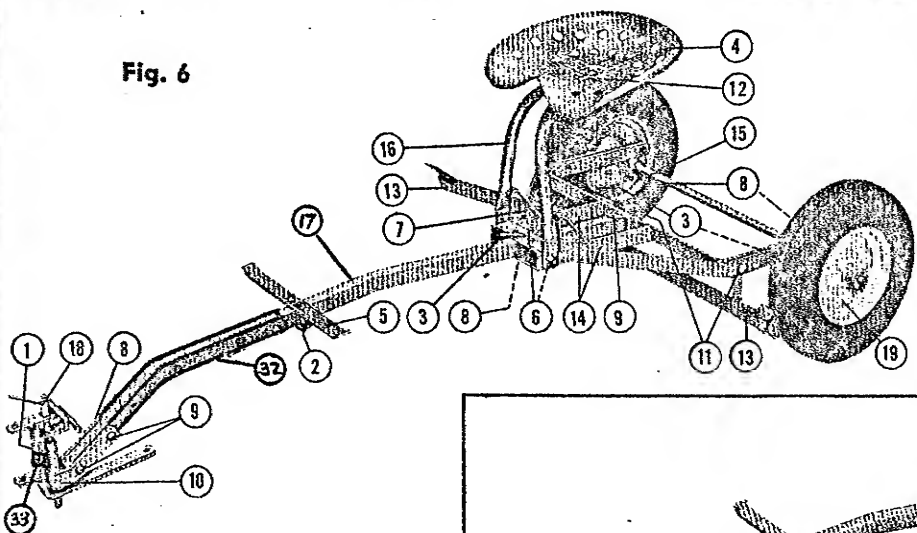


Fig. 3

Fig. 4

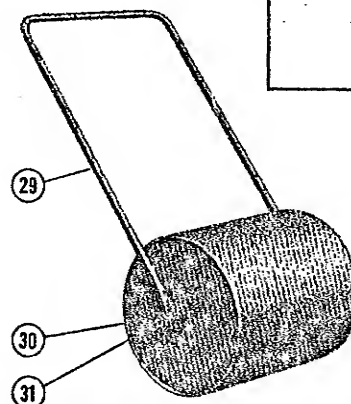
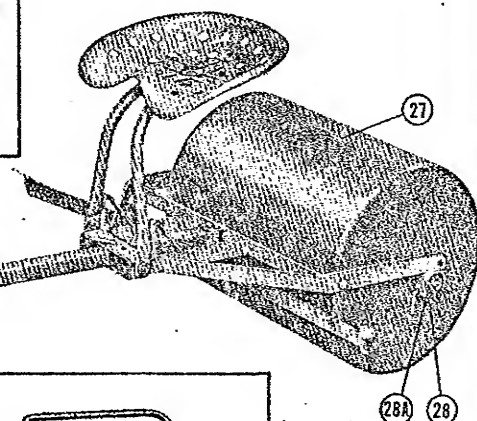


Fig. 5

## REPAIR PARTS LIST FOR COMBINATION SULKY, TRAILER BODY, LAWN ROLLER AND HANDLE FOR LAWN ROLLER

Order by Part Number

Item No.	Part No.	Description	Ship. Wt. Lbs. Oz.	
SULKY				
1	100033	Frame Extension	5	10
2	C-A118	Foot Rest Clamp 801118		8
3	C-A204	Tongue Pin 8011204		4
4	121029	Seat	5	
5	C-B103	Foot Rest - 8012103	2	6
6	P-A32	Bushing - 8111032		3
7	P-A47	Spring - Brake - 8111047		3
8	S1A45A	Spring Clip 8161045		2
9	100028	Tongue Pin		4
10	100037	Clevis Assembly	3	
11	102004	Pivot Pin		4
12	102006	Seat Plate	1	2
13	102013	Brake Assembly	11	4
14	102021	Frame Assembly	21	
15	102027	Axle Assembly	7	
16	102028	Seat Support	4	
17	102062	Tongue	11	8
18	100035	Hitch Pin Assy.	1	10
19	102032	Wheel only, 4" hub, 3/4" axle, less tire	5	


Item No.	Part No.	Description	Ship. Wt. Lbs. Oz.	
19A	102052	Tire 4.00 x 8 Rib Tread	15	
19B	153038	Tube 4.00 x 8	5	
<b>TRAILER BODY</b>				
20	102002	Trailer Body	58	8
21	102003	End Gate	8	8
22	102004	Pivot Pin		4
23	102005	Box Guide Plate	1	6
24	102024	Box Pivot Assembly	12	
25	R-A76A	Bushing <i>8151076</i>		2
26	S1A45A	Spring Clip <i>8161045</i>		2
<b>LAWN ROLLER</b>				
27	102001	Roller - Lawn	80	
28	102034	Bushing (Nylon)		6
28A	102007	Bearing Retainer		12
<b>HANDLE FOR LAWN ROLLER</b>				
29	102031	Handle Assembly	10	8
30	S1A45A	Spring Clip - <i>8161045</i>		2
31	C-A204	Pin <i>8011204</i>		4

32 102063 TONGUE EXT. R.H.  
102064 " L.H.  
33 100071 STOP BAR





COMBINATION RIDING SULKY  
Article 990200

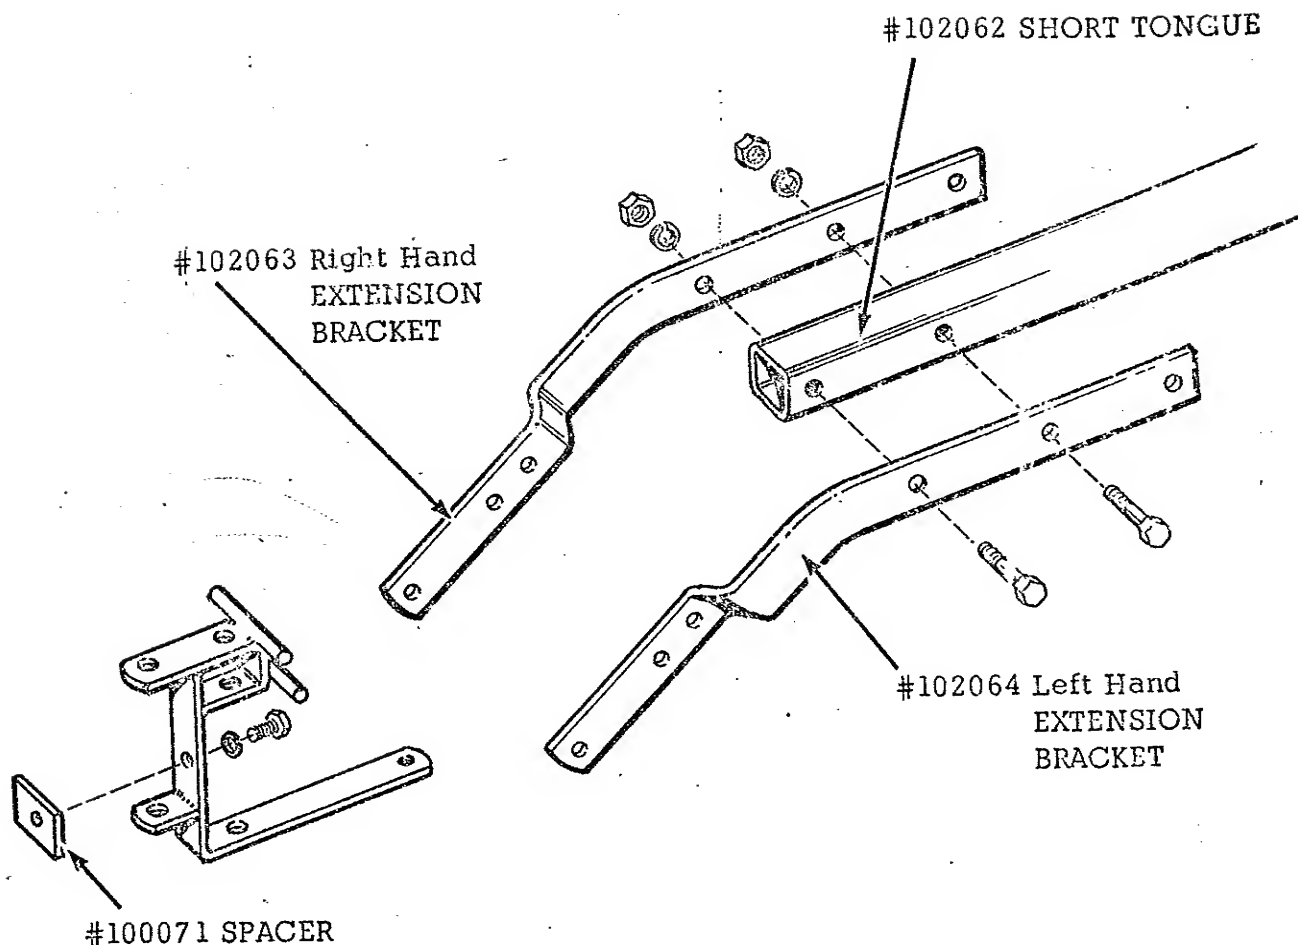

The 990200 Sulky is shipped with the new short tongue and extension brackets as pictured above. When shipped, these brackets are assembled in the short position shown; for use with the Model W Tractor. For use with other tractor models, the brackets must be re-assembled in their long position on the tongue.

The #100071 spacer or stop bar is necessary when using the Sulky with the W Tractor as it limits the play between the frame extension and draw bar.

